


## A INSTALLATION OF LENGTHS

**1** The installation of length should follow the gas direction mark

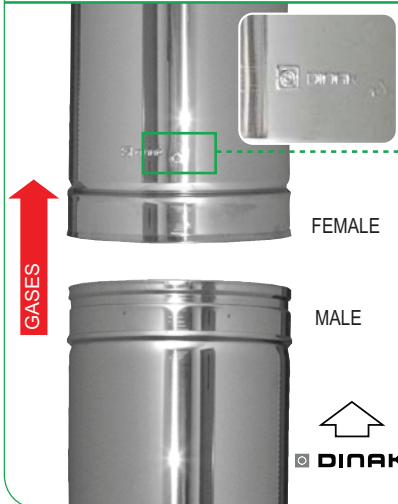

**2** for  $\varnothing$  80 mm to 130 mm: lubricate the external face of the inner wall of the female end

for  $\varnothing$  > 130 mm: lubricate the internal face of the inner wall of the male end



**3** Fit and tighten the locking band



## B TEE AND SOOT COLLECTOR

MALE

020

FEMALE

080

031

070

060



## C INSTALLATION OF ADJUSTABLE LENGTHS

**1** Disassemble the 2 sections by loosening the locking band



**2** To reduce the length of the adjustable: remove the insulation from the Female end and cut it to the desired length



**3** Place the joint:  
for  $\varnothing$  80 mm to 130 mm: in the wall of the male end  
for  $\varnothing$  > 130 mm: in the inner wall of the female end



**4** for  $\varnothing$  80 mm to 130 mm: lubricate the external face of the inner wall of the female end  
for  $\varnothing$  > 130 mm: lubricate the internal face of the inner wall of the male end



**5** Re-assemble the Female and the Male sections and fix the locking band



**6** Tighten the locking band

