



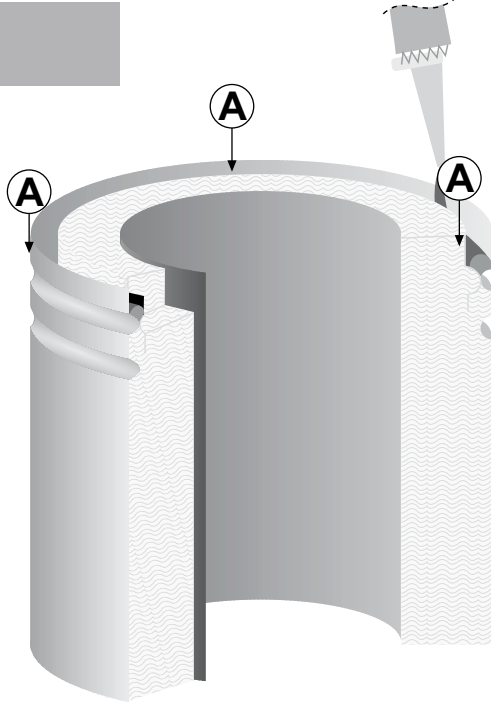


INSTALLATION INSTRUCTIONS

A POSITIONING

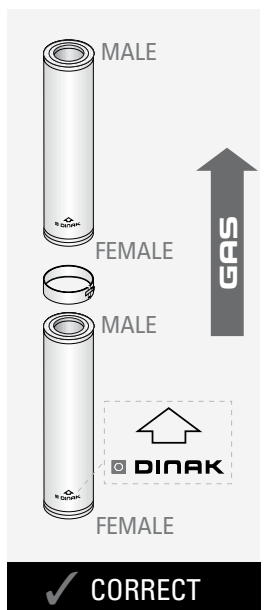


SEALING INSTRUCTIONS

- Apply silicone cord inside perimeter (A)
- Proceed to connect the 2 elements without twisting or turning them, fit the locking band /wall support and tighten.
- Please allow for a silicone setting time of 48h.

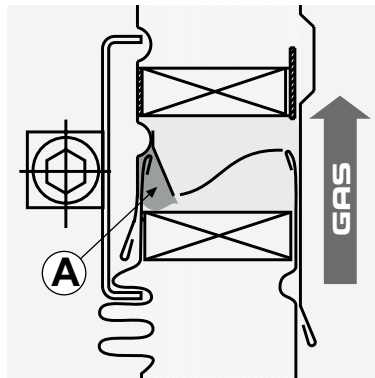


B HOW TO ADJUST ADJUSTABLE LENGTHS TO THE DESIRED LENGTH


Unlock the locking band (070) and separate the female section (F) from the male (M).

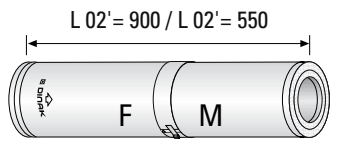


Take off the rock wool insulation (A) from the inside of the female section (F) until the desired length has been reached.

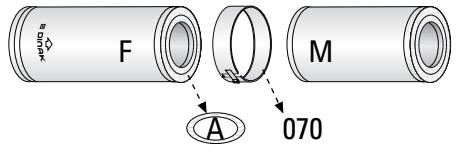

Reconnect both female and male ends (F and M) and tighten the locking band (070).

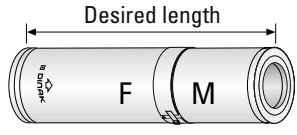

SEALING OF AJDUSTABLE LENGTHS

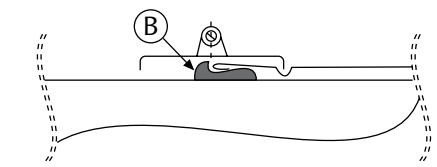


Adjust the element to the desired length, apply silicone cord in (B) and tighten locking band.

C GENERAL GUIDELINES

- VERTICAL installations: install a wall support (080) each 3 metres of flue. For Diameters > 600 mm: one for each metre of flue.
- HORIZONTAL or installations WITH A SLOPE: install a wall support (080) each 2 metres of flue.
- Before a change in direction (i.e. vertical / offsets) always use a wall support (080). The screws used should be appropriate for the material of the wall and always in stainless steel AISI 304 or AISI 316.
- A guy wires bracket (110) should be used in case the flue comes out more than 3 m. from the last fixing point to the wall.

D INSTALLATION OF TEES + SOOT COLLECTOR

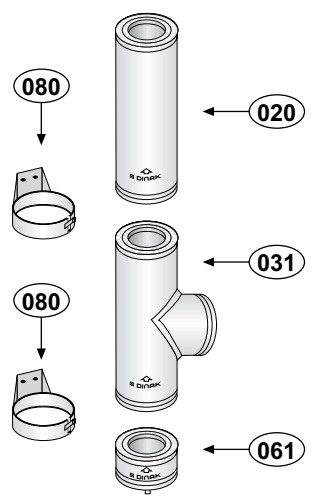




INSTALLATION

LIST OF COMPONENTS

016	HORIZONTAL TERMINAL
011	OPEN TERMINAL
020	STRAIGHT LENGTH
022	LONG ADJUSTABLE LENGTH
023	SHORT ADJUSTABLE LENGTH
031	90° TEE
040	45° BEND
050	TEST UNIT
060	SOOT COLLECTOR
061	SOOT COLLECTOR WITH DRAIN
070	LOCKING BAND
080	WALL SUPPORT
090	WALL SUPPORT WITH 2 EXTRA FIXING POINTS
100	BOILER ADAPTOR
110	GUY WIRE BRACKET
013	STORM COLLAR
014	WALL SLEEVE
017	ADJUSTABLE FLASHING 30/45° WITH STORM COLLAR
018	ADJUSTABLE FLASHING 5/30° WITH STORM COLLAR
019	FLAT FLASHING WITH STORM COLLAR
026	REDUCTION
082	ROOF SUPPORT
021	SILENCING LENGTH

NOTE:
DINAK reserves the right to modify any information contained within these instructions without notification.

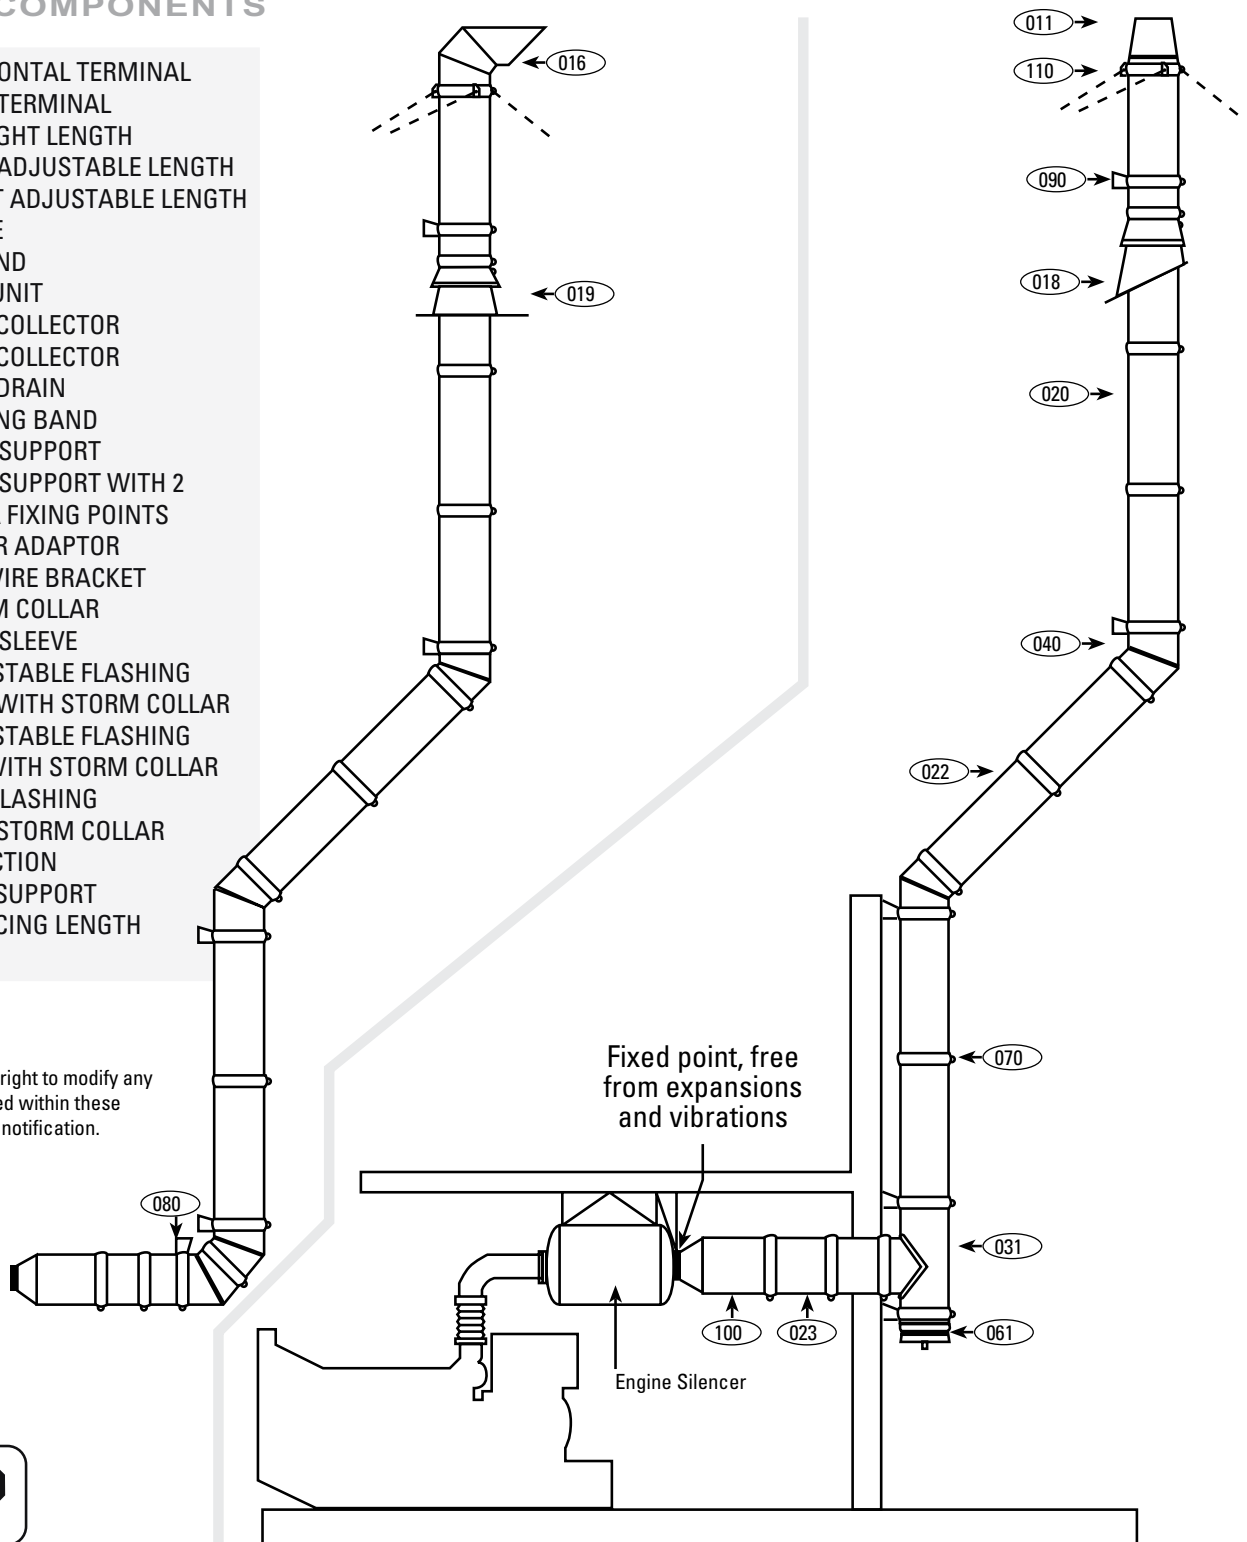

(*) Certification for ϕ up to 700 mm.



0036 CPD 90220 013



DINAK S.A. Camiño do Laranxo, 19. 36216 Vigo - Spain. ☎ +34 986 452 526 📠 +34 986 454 192 ✉ sales@dinak.com

www.dinak.com